


User Manual

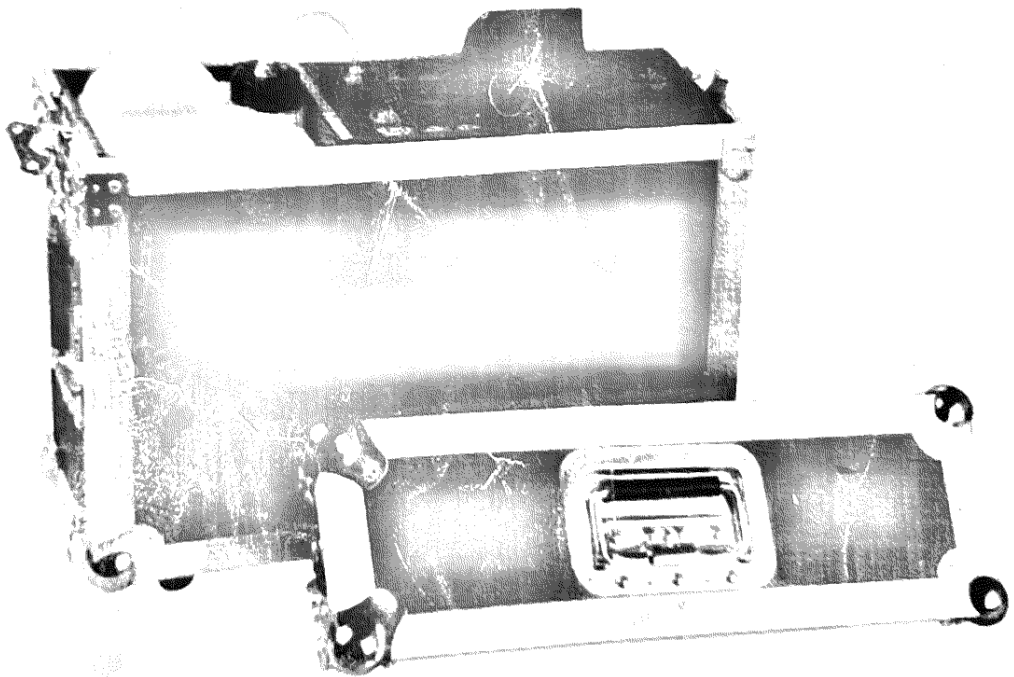

2000W Haze Machine

Please read these operating instructions carefully to familiarize yourself with the basic operating instructions of this unit. These instructions contain important information regarding the use and maintenance of the unit. Please keep this manual with the unit for future reference.

Caution:

1. Be sure the local power outlet matches the required voltage of this unit. To control the voltage parameters of the machine, please pay attention to the circuit load of the site.
2. Disconnect from main power before adding the fog oil. Please be careful do not to let the oil flow into the machine before adding the oil.
3. Disconnect from main power before making any connection.
4. Smoke machine is not waterproof. If there is water vapor Or smoke oil into the machine, should cut off power and contact your dealer.
5. During long periods of non-use, disconnect the main power.
6. Always replace with the exact same type lamp and fuse. Disconnect the unit from the main power and allow the unit the ample time to cool before attempting to replace the lamps and fuse.
7. Use normal glass cleaner or a soft cloth to wipe down the unit casing. Always be sure to dry all the parts completely before plugging the unit back in.
8. Please always check the liquid stock, smoke agent exhaustion, still do not stop operation will inevitably lead to machine damaged. If there is a small amount of smoke, when the oil pump has noise or can not smoke, the power should be cut off immediately, and the smoke dose, fuse, remote control connector and power plug should be checked. If you still can't find the problem out, please stop the inspection, so as not to damage the machine, and return the machine to the dealer for repair

In order to avoid the danger, please strictly observe the following instructions (safety warning) :

1. This product is for adult use only, and the product should be located in places where children cannot contact. In use, always pay attention.
2. It is forbidden to spray directly to the human body and keep away from inflammable and explosive goods.
3. The spraying temperature is quite high, so the nozzle should be kept up to 5 meters away from the nozzle. (the surface temperature of the machine can reach 40 to 80 degrees centigrade, do not touch).
4. The machine should be placed in a well-ventilated place. It is strictly prohibited to cover the

whole machine with any articles. This will lead to the failure of the heat dissipation function of the machine, causing the temperature to be too high and causing the fire.

5. No direct contact between the machine and the ground is allowed when the ground is laid with ground felt and wood floor. Maintain a vertical distance of no less than 50CM from the ground. Inflammable and explosive materials should not be stored in 300CM around.

6. To avoid the danger of explosion, please note: do not add flammable liquids, such as oil, gas or spices in oil tank.

Maintenance:

Pls use the mixture liquid (80% distilled water + 20% white vinegar) to clear the pipe inside after the using time as below:

- 1. After about 40hours working Continuously;
- 2. After about 15 days working, and several hours working each day.

Note: Pls put 2L - 3L mixture liquid into the oil tank, and then keep the machine on working until all of the mixture liquid been used up.

1. Button panel operation:

FUNCTION	UP	DOWN
TIMER	VOLUME	MANUAL

- 1. FUNCTION: function setting;
- 2. UP: parameter up;
- 3. DOWN: parameter down;
- 4. TIMER: on or open button of regular consumption and time;
- 5. VOLUME: continuous output;
- 6. MANUAL: manual output.

2. Function setting(please press FUNCTION to choose):

- 1. Interval Set: spacing interval of regular output(0~200) seconds;
- 2. Duration Set: time of regular output(0~200) seconds;
- 3. DMX512 ADD: setting of controller address(1~512);
- 4 Fluid SENSOR: Liquid sensor switch(ON~OFF)
- 5. Fan Speed: speed of fan(0~100). Volume Out: Smoke control(1~100)

3. DMX512 Channels:

Channel	Function	DMX value
CH 1	Spray button	0~127 off, 128-255 on
CH 2	Speed of fan	0~255 from small to large
CH 3	Output adjustment	0~255 from small to large

4. Technical specification:

Voltage: AC220V, 50Hz

Power: 2000W

Pre-heating: 2.5 Min

Smoke output: 15000 cuft/min

Tank capacity: 3L

Oil consumption: 3h/L

LCD-3 controller/DMX512: support

Oil-free protection

Packing size: 55×20×46cm

G.W: 16kg

5. Product description:

Professional long-life haze machine with small size and flight case. Many sets can be used superimposed. With the special designed heating system, it can produce even haze continuously. 0-100 fan output regulation. It's a large and medium-sized bar, performance, the best supplement of concerts lights.

Please note: Every information is subject to change without prior notice.